



Duct connections / Raccordement des conduits

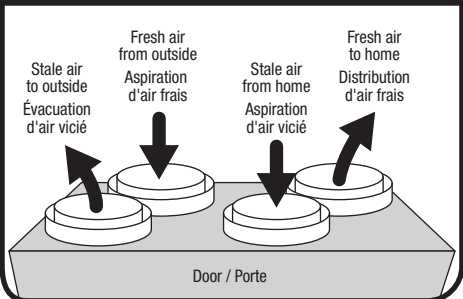

Balancing chart / Tableau d'équilibrage

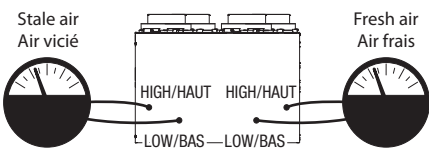

Pressure / Pression		Fresh air / Air frais		Stale air / Air vicié	
IN. W.G. PO. d'eau	Pascal (Pa)	CFM PCM	L/s	CFM PCM	L/s
0.98	244	149	70	-	-
0.94	234	146	69	-	-
0.90	224	144	68	-	-
0.86	214	141	67	-	-
0.82	204	138	65	-	-
0.78	194	134	63	-	-
0.74	184	131	62	-	-
0.70	174	127	60	156	74
0.66	164	123	58	153	72
0.62	154	119	56	148	70
0.58	144	115	54	144	68
0.54	135	110	52	139	66
0.50	125	105	50	133	63
0.46	115	100	47	128	60
0.42	105	94	44	121	57
0.38	95	89	42	115	54
0.34	85	83	39	107	50
0.30	75	77	36	100	47
0.26	65	71	34	92	43
0.22	55	64	30	83	39
0.18	45	57	27	75	35
0.14	35	50	24	65	31
0.10	25	43	20	56	26
0.06	15	36	17	45	21



WARNING

ELECTRICAL SHOCK HAZARD

Could result in serious injury or death

Disconnect power supply
before servicing this equipment



AVERTISSEMENT

RISQUE D'ÉLECTROCUTION

Pourrait entraîner des blessures graves ou la mort

Débrancher le cordon d'alimentation
avant l'entretien de cet appareil