



## Duct connections / Raccordement des conduits

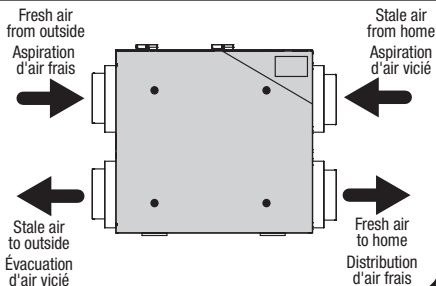

## Balancing chart / Tableau d'équilibrage

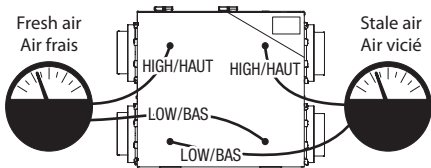

Pressure / Pression		Fresh air / Air frais		Stale air / Air vicié	
IN. W.G. PO. d'eau	Pascal (Pa)	CFM PCM	L/s	CFM PCM	L/s
0.36	90	216	102	-	-
0.34	85	209	99	222	105
0.32	80	200	94	214	101
0.30	75	192	91	207	98
0.28	70	183	86	198	93
0.26	65	173	82	189	89
0.24	60	163	77	180	85
0.22	55	153	72	170	80
0.20	50	142	67	159	75
0.18	45	131	62	148	70
0.16	40	119	56	136	64
0.14	35	107	50	124	59
0.12	30	95	45	111	52
0.10	25	82	39	97	46
0.08	20	68	32	83	39
0.06	15	55	26	69	33
0.04	10	55	26	54	25



# WARNING

## ELECTRICAL SHOCK HAZARD

Could result in serious injury or death

Disconnect power supply  
before servicing this equipment



# AVERTISSEMENT

## RISQUE D'ÉLECTROCUTION

Pourrait entraîner des blessures graves ou la mort

Débrancher le cordon d'alimentation  
avant l'entretien de cet appareil