



Duct connections / Raccordement des conduits

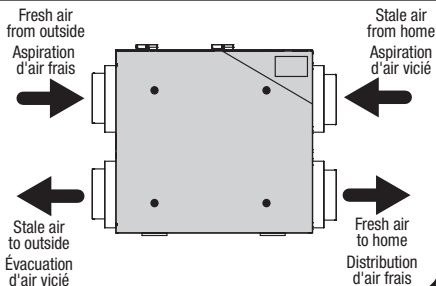

Balancing chart / Tableau d'équilibrage

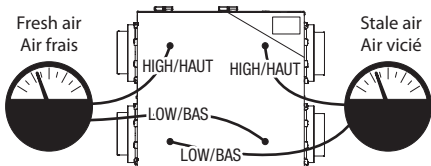

Pressure / Pression		Fresh air / Air frais		Stale air / Air vicié	
IN. W.G. PO. d'eau	Pascal (Pa)	CFM PCM	L/s	CFM PCM	L/s
0.60	149	186	88	187	88
0.58	144	182	86	184	87
0.56	139	177	84	180	85
0.54	135	172	81	176	83
0.52	130	167	79	173	82
0.50	125	162	76	169	80
0.48	120	157	74	165	78
0.46	115	152	72	161	76
0.44	110	146	69	156	74
0.42	105	141	67	152	72
0.40	100	136	64	147	69
0.38	95	130	61	143	67
0.36	90	125	59	138	65
0.34	85	119	56	133	63
0.32	80	113	53	128	60
0.30	75	107	50	123	58
0.28	70	102	48	117	55
0.26	65	96	45	112	53
0.24	60	90	42	106	50
0.22	55	84	40	100	47
0.20	50	78	37	94	44
0.18	45	71	34	88	42
0.16	40	65	31	82	39
0.14	35	59	28	76	36
0.12	30	52	25	69	33
0.10	25	46	22	62	29
0.08	20	39	18	56	26
0.06	15	33	16	49	23



WARNING

ELECTRICAL SHOCK HAZARD

Could result in serious injury or death

Disconnect power supply
before servicing this equipment



AVERTISSEMENT

RISQUE D'ÉLECTROCUTION

Pourrait entraîner des blessures graves ou la mort

Débrancher le cordon d'alimentation
avant l'entretien de cet appareil