



COM | NC | NO | B | G | R | B/B1 | W | G | R
 INTERLOCK | TIMER / MINUTERIE | CONTROL / COMMANDE

Terminal barrier / Bornier de raccordement

Duct connections / Raccordement des conduits

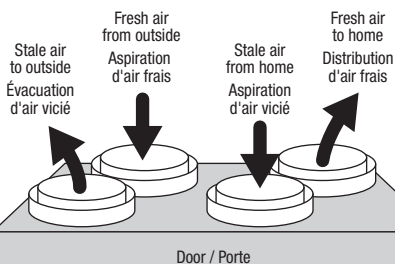

Balancing chart / Tableau d'équilibrage

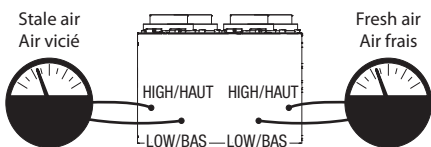

Pressure / Pression		Fresh air / Air frais		Stale air / Air vicié	
IN. W.G. PO. d'eau	Pascal (Pa)	CFM PCM	L/s	CFM PCM	L/s
0.98	244	32	15	-	-
0.95	237	38	18	-	-
0.92	229	44	21	33	16
0.89	222	50	24	39	18
0.86	214	56	26	44	21
0.83	207	61	29	49	23
0.80	199	66	31	54	25
0.77	192	70	33	58	27
0.74	184	75	35	62	29
0.71	177	79	37	66	31
0.68	169	83	39	69	33
0.65	162	86	41	72	34
0.62	154	90	42	75	35
0.59	147	93	44	78	37
0.56	139	95	45	81	38
0.53	132	98	46	83	39
0.50	125	100	47	85	40
0.47	117	102	48	88	42
0.44	110	103	49	90	42
0.41	102	105	50	92	43
0.38	95	106	50	95	45
0.35	87	107	50	97	46
0.32	80	-	-	100	47
0.29	72	-	-	103	49
0.26	65	-	-	106	50
0.23	57	-	-	109	51

WARNING

ELECTRICAL SHOCK HAZARD

Could result in serious injury or death

Disconnect power supply before servicing this equipment

AVERTISSEMENT

RISQUE D'ÉLECTROCUTION

Pourrait entraîner des blessures graves ou la mort

Débrancher le cordon d'alimentation avant l'entretien de cet appareil